


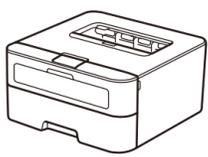

Quick Setup Guide

LJB476001-00
604E 77060 MB3547E2-1 (Edition 1)
September 2014
Copyright © 2014 by Fuji Xerox Co., Ltd.
Fuji Xerox Co., Ltd. Printed in Vietnam

Unpack the machine and check the components



Drum Unit
(Pre-installed)



AC Power Cord
(only for certain models)



Quick Setup Guide



USB Interface Cable



Inbox/Starter Toner Cartridge



CD-ROM



Safety Guide

Read the Safety Guide first, then read this Quick Setup Guide for the correct installation procedure.


NOTE:

- The components included in the box and the AC power plug may differ depending on your country.
- The available connection interfaces vary depending on the model.
- The illustrations in this Quick Setup Guide are based on the DocuPrint P265 dw.
- The USB cable is a standard accessory.


Network cable

Use a straight-through Category 5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.


1 Remove the packing materials and install the toner cartridge

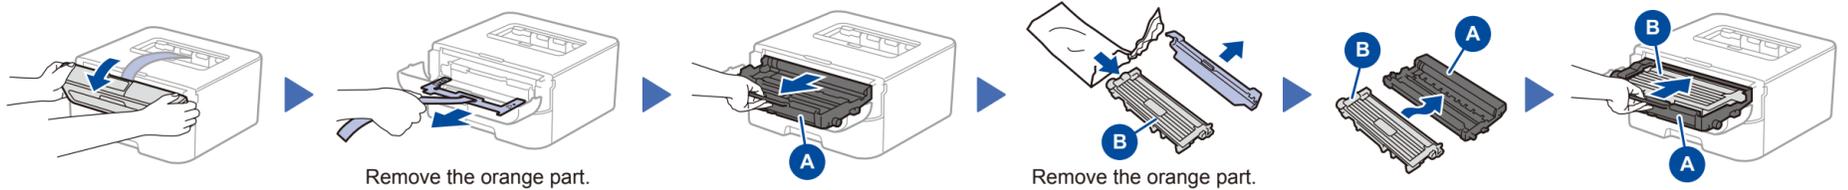

2 Load paper in the paper tray

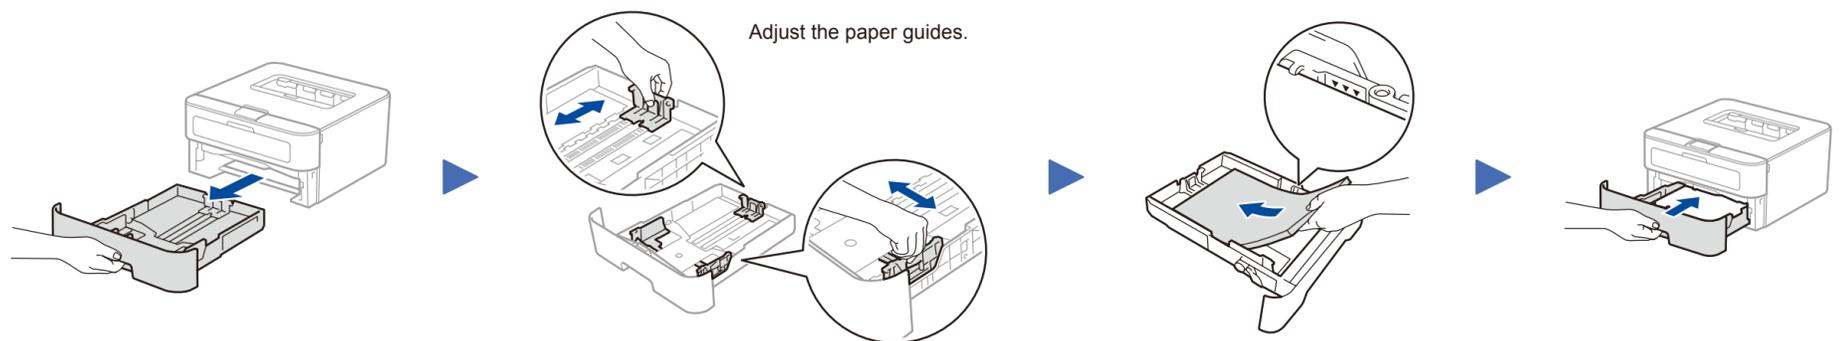

3 Connect the power cord and turn on the machine

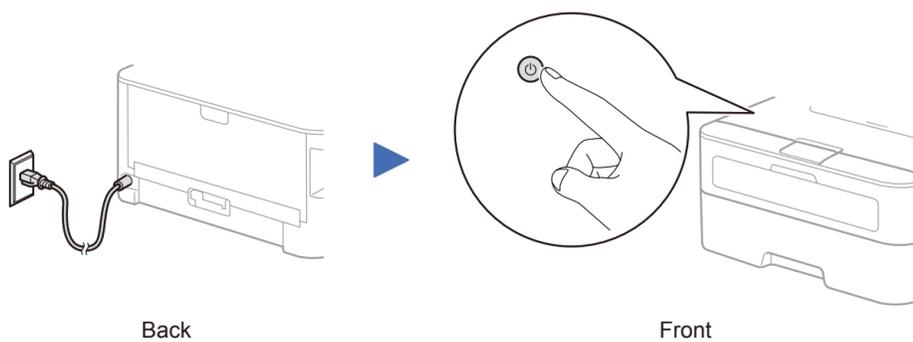


4 Select your language (Only for certain models)

1. Press ▼ or ▲ to select **General Setup**, and then press **OK**.
2. Press **OK** to select **Local Language**.
3. Press ▼ or ▲ to select your language, and then press **OK**.


5 Connect the machine to your computer/mobile device

- Windows® PC with a CD-ROM drive, go to step **5A**
- Windows® PC without a CD-ROM drive, go to step **5B**
- Macintosh, go to step **5B**
- Mobile device users with a WPS/AOSS-supported access point/router, go to step **5C**

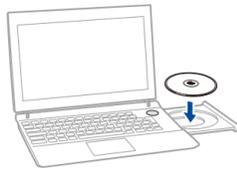


**NOTE:**

If the Fuji Xerox screen does not appear automatically, go to **Computer**.
(For Windows® 8: click the (File Explorer) icon on the taskbar, and then go to **Computer**.)
Double-click the CD-ROM icon, and then double-click **start.exe**.

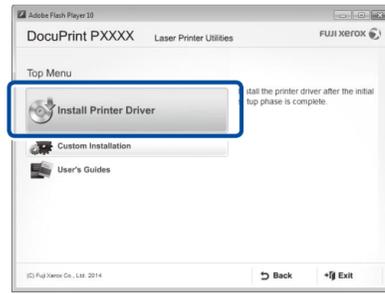

Follow the on-screen instructions until the **Connection Type** screen appears.

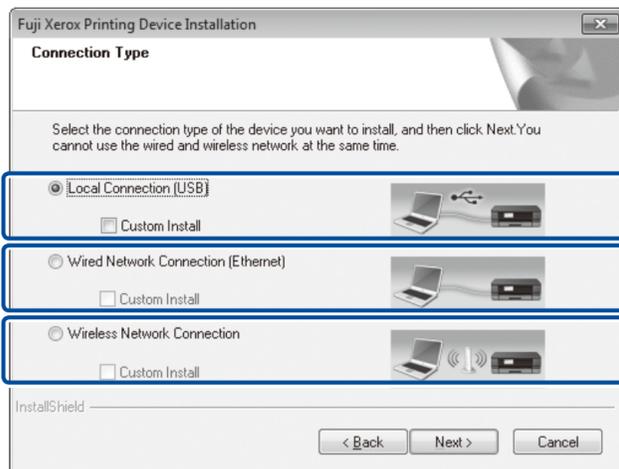Connection Type

For USB Connection


For Wired Network Connection
Connect a network cable first.

For Wireless Network Connection
We recommend preparing a USB cable to use temporarily during the wireless setup.

Follow the on-screen instructions to continue installation.

Finish**NOTE:**

If connection is unsuccessful, repeat this step.

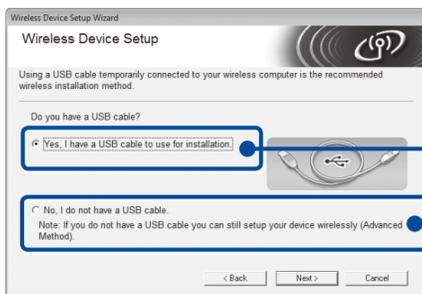**Wireless Network Connection****[Recommended]**

Select this option if you have a USB cable to use temporarily for wireless setup.

Select this option if you do not have a USB cable.

Follow the on-screen instructions to continue installation.

Finish**NOTE:**

If connection is unsuccessful, repeat this step.



Download the full driver and software package by visiting the Fuji Xerox website at <http://www.fujixeroxprinters.com/>.


After you download the driver and software package, follow the on-screen instructions until the **Connection Type** screen appears. Refer to **5A Configuration using the CD-ROM (Windows®)**.



If your wireless LAN access point/router supports automatic wireless (one-push) setup (WPS/AOSS™), you can set up your machine without using a computer.



Press the WPS or AOSS™ button on your wireless LAN access point/router.

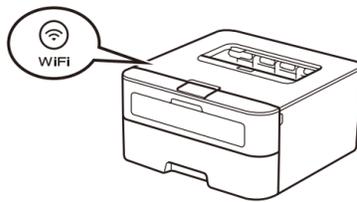

Press the **WiFi** button on your machine.

Wireless setup is now complete.