
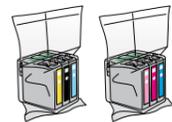


# EPSON STYLUS™ PHOTO 1390 Series

## Start Here

### 1. Unpacking

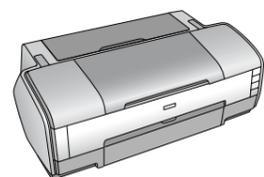

Ink Cartridge



Power Code



CD-ROM




Start Here

#### Note:


Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.

### 2. Removing Protective Tape

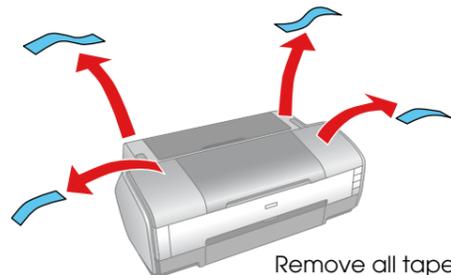



Remove all tape

### 3. Turning On

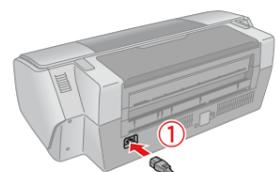


Connect

Plug in

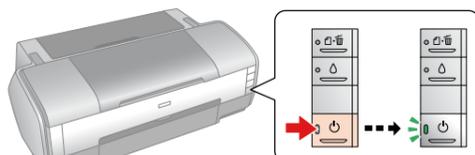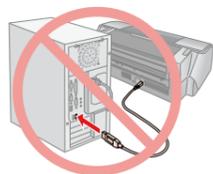


Turn On

### 4. Preparing the Ink Cartridges

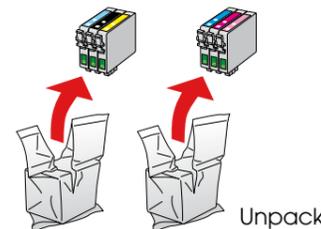


Unpack

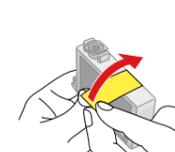


Only remove the yellow tape




### 5. Installing the Ink Cartridges

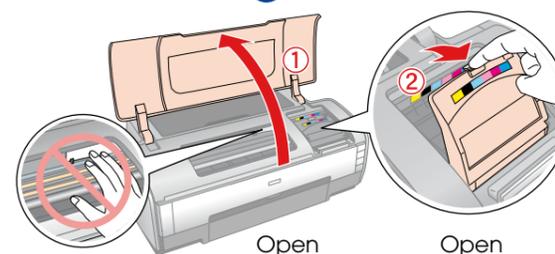


Open

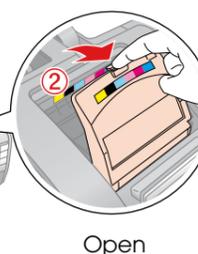


Open

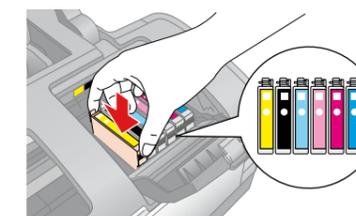


Install

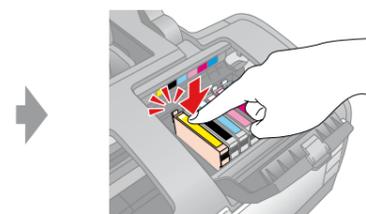

Press (Click)

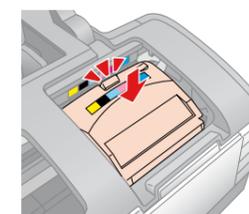


Close (Click)

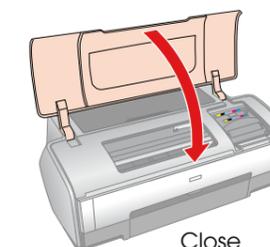

Close

### 6. Ink Charging

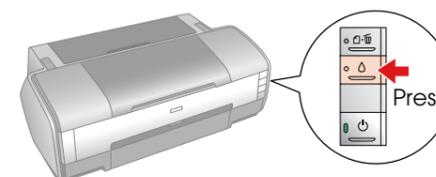


Press



Flashing

 Wait  
About 3 min



On

#### Note:

The ink cartridges first installed in your printer will be partly used to charge the print head. Subsequent ink cartridges will last for their full rated life.



Copyright © 2006 Seiko Epson Corporation. All rights reserved.  
Printed in XXXXXX XX-XX-XX XXX




Turn over




# 7. Installing the Software

Do not connect the USB cable until you are instructed to do so.

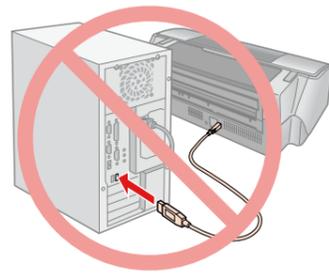

If this screen appears, click **Cancel**.

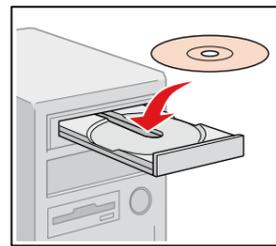

Insert

For Windows

For Mac OS X




Double Click



Click

❑ For Windows. No installation screen? ➔ Double-click the CD-ROM icon.

➔ Follow the instructions.

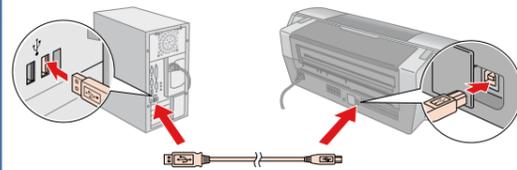


When this screen appears, connect to your PC.

➔ Follow the instructions.



Installation complete.


# 8. Loading Paper

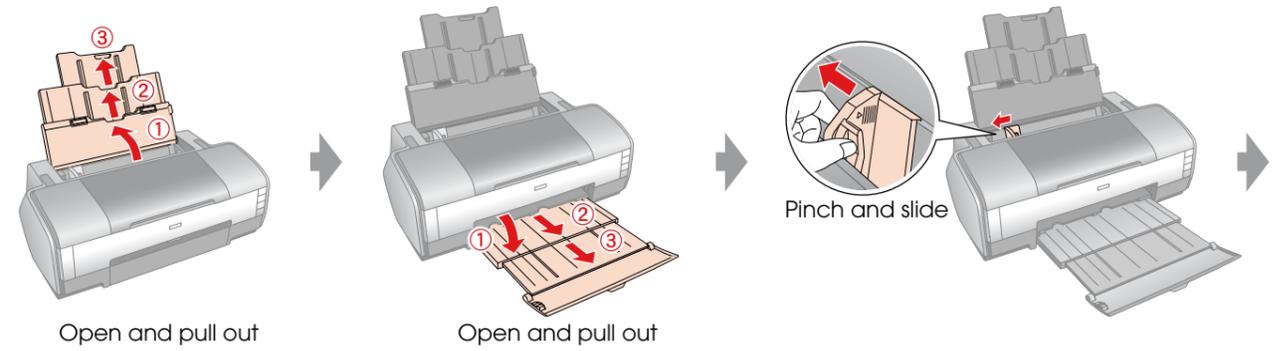

Open and pull out

Open and pull out

Pinch and slide

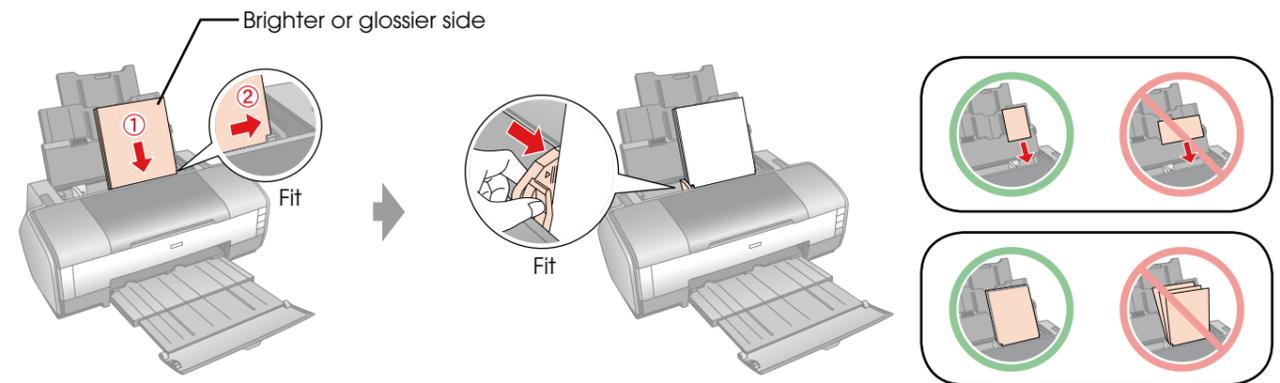


Brighter or glossier side

Fit


Fit

# 9. Getting More Information

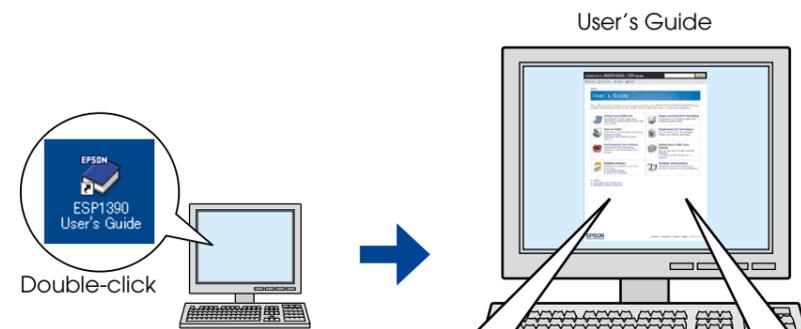


Double-click

User's Guide

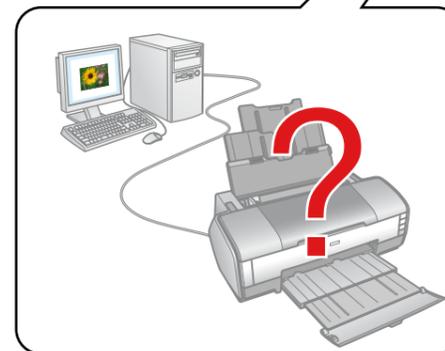

Troubleshooting

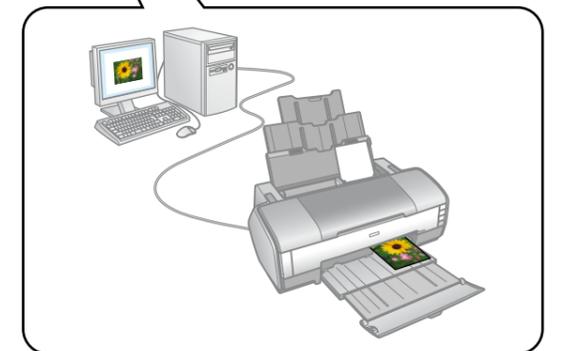

Printing